

2 1/4" Button Maker

SHELL DIE:

Place the shell (the one without the pin) in the SHELL DIE with the sharp edge facing down.
Place the artwork (facing up) on top of the shell.
Line up the top of your design with the arrow on the die.
Place the clear mylar cover on top of the artwork.

BACK DIE:

Place the back shell in the BACK DIE with the sharp edge facing up.
Line up the top of the shell (pin goes at the top) with the arrow on the die.

SHELL DIE:

Rotate the SHELL DIE until it lines up under the press.
Pull the press handle down all the way. Release.

BACK DIE:

Rotate the BACK DIE around until it lines up under the press.
Pull the press handle down all the way. Release.

Remove your new button!